

OPERATOR'S SAFETY AND SERVICE MANUAL



RS ROLLER STRIKER

Operating instructions and spare parts list



ROLLER STRIKER

MBW Europe Ltd.
Units 2&3 Cochrane Street
Bolton BL3 6BN
England, UK
Phone: 44 (0)1204 387784
Fax: 44 (0)1204 387797
E-mail: saleseurope@mbw.com
Website: www.mbweurope.com

MBW RS ROLLER STRIKER INSTRUCTIONS

The MBW RS Roller Striker is a fast, efficient and alternative way to the conventional dual beam screed to strike off and finish large floor area of newly laid concrete. Tubes of various sizes are fitted to a hydraulically powered drive handle, which in turn spins the tube over the surface, leaving aggregate near the surface, which results in a very strong floor. The RS Roller Striker is quick and easy to set up, use and clean.

WARNING

Before you attempt to either use or carry out any servicing or maintenance to this machine you must first make sure you have read and fully understand these operating instructions.

Know how to safely use the unit's controls and what you must do for safe maintenance.

(NB Be sure that you know how to switch the machine off before you switch it on in case you get into difficulty.)

Always wear or use the proper safety items required for your personal protection.

If you have any questions about the safe use or maintenance of this product please ask your supervisor or contact a member of the MBW Europe team.

PRE START CHECKS

Pre start up inspection

The pre start instructions that follow must be performed before the start of each work session or after every four hours of use, whichever comes first. If any fault is discovered, the Roller Striker must not be used until the fault is rectified.

Thoroughly inspect the Roller Striker for signs of damage. Check that the handles are securely attached.

Check fluid lines, hoses filler openings, drain plugs and any other areas for signs of leakage. Fix any leaks before commencement of operation.

Inspect the entire unit for loose fittings and retighten/replace as necessary. Ensure that all connections between the tube and drive end / opposite handles are secure and all locking pins are safely in place.

OPERATING INSTRUCTIONS

Start and stop procedure

CAUTION

Incorrect use of this machine can result in injury to the operator or improper operations can be hazardous. Ensure that you are familiar with the operation of the power pack and the roller striker before use.

Refer to the manufacturers operating instructions manual for the start-up procedure for your hydraulic power pack.

Ensure that before starting the power pack that all connections are tight and that the control valve on the striker is in the neutral position.

Ensure that you move the control lever to the correct position for the direction of travel.

This will ensure that the striker is rotating in the opposite direction to that in which it is being pulled.

To start the Roller Striker, move the control lever to the left to rotate the tube in a clockwise direction and move it to the right to rotate the tube anti-clockwise.

Transportation

If the Roller Striker is to be transported to another location, ensure that the Striker is not rotating and that the hydraulic pipes are disconnected.

Never transport the roller striker whilst it is still connected to the drive source, even if it is only being moved a short distance

CAUTION

Always ensure that you are aware of the direction of travel when using the roller striker. If you incorrectly engage the drive mechanism you will not only endanger yourself, but also jeopardize the other operator(s).

Having carried out the checks listed in the 'Start and Stop Procedure' section, you may connect it to the drive source and move the control lever to the on or drive position.

When positioned correctly the tube will start rotating away from the operator. Ensure that the other operator knows you are going to start the machine. Always check the tube for any signs of unusual noise.

If this occurs, stop the machine immediately and refer to the troubleshooting section in this manual. The roller striker will then require a consistent pulling movement to obtain a smooth finish.

SAFETY INSTRUCTIONS

Communication

Poor communication can cause accidents.

If two or more people are working the machine, make sure that each person is aware of what the others are doing. Before starting the machine, make sure others are clear of the danger areas.

People can be seriously injured or killed if these precautions are not taken. Keep people around you informed of what you are doing. If you will be working with other people, make sure that they understand any hand signals that you intend to use. Work sites can be very noisy – do not rely on spoken commands.

Safety Instructions

For your own personal protection and for the safety of those around you, please read and ensure that you fully understand the following safety information. It is the responsibility of the operator to ensure that they fully understand how to operate this equipment safely. If you are unsure about the safe and correct use of the equipment, ask for guidance from your supervisor or contact a member of the MBW Europe team.

CAUTION

Improper maintenance can be hazardous. Read and understand this section before you perform any maintenance, service or repairs to the unit.

This equipment is heavy and must not be lifted single-handedly, either get help or use suitable lifting equipment.

Cordon off the work area and keep members of the public and unauthorized personnel at a safe distance.

Personal Protective Equipment (PPE) must be worn by the operator(s) whenever this equipment is being used.

Make sure that you know how to switch the machine off before you switch it on in case you get into difficulty.

Always switch off the engine before either transporting or moving the unit around the site or when you carry out any maintenance, service or repairs to the unit.

During use the engine becomes very hot. Allow the engine to cool before touching it. Never leave the engine running and unattended.

Always ensure that no person or object likely to obstruct you is in your line of travel. Watch your step to avoid tripping.

Never remove or tamper with any guards/pipes fitted, they are there for your protection. Always check guards for condition and security and if any parts are damaged or missing. Do not use the machine until the relevant part has been replaced or repaired.

Do not operate the machine when you are ill, feeling tired or when under the influence of alcohol or drugs.

HEALTH & SAFETY

Vibration

Some vibration from the Roller Striker is transmitted through the handle to the operator's hands. Refer to Technical Data section for vibration levels.

PPE (Personal Protective Equipment)

Suitable PPE must be worn when using this equipment, i.e. Safety Goggles, Gloves, Ear Defenders, Dust Mask and Steel Toe Capped footwear. Wear the appropriate clothing for the work you are doing. Always protect naked flesh from contact with concrete. Suitable ear defenders should always be used when operating the machine.

Troubleshooting

Problem	Cause	Remedy
Tube not rotating	Not connected to power source	Connect to power source
Tube still not rotating	Major fault	Contact service agent or MBW Europe
Unusual noise or operation of the tube	Check drive / opposite end connections	Re-connect and re-try
Concrete sticking to striker tube	Concrete too dry	Wet concrete

Service & Maintenance

MBW Europe RS Roller Strikers are designed to give many years of trouble free operation. Always use authentic MBW spare parts, the use of non-genuine parts may invalidate your warranty.

Before any maintenance is carried out on the machine, ensure that it has been disconnected from any power source.

Always ensure that the drive ends are kept clean and free from concrete deposits. Ensure that the drive ends are kept lubricated to avoid the build-up of rust.

TECHNICAL DATA

Weight (Drive & Opp. Handles)	22kg
Motor Power (hp)	3 Hp
Max. Drive Speed	500 Rpm
Pressure Required (Bar)	140 Bar
Flow Rate (l/min)	30l/min
Vibration (m/s ²)	4.00 m/s ²

Danfoss Hydraulic Components

ISO/IEC 17050-1 Declaration of Conformity

Hydraulic Hose & Assembles

SAE J1273/SAE J517

Hydraulic Adaptors,

ISO 8434-6/BS 5200

Quick Release Couplings,

ISO 1628 / Amd 1;206E

FORM REF B-A3
QUALITY ASSURANCE CERTIFICATE 675

Quality Assurance Scheme
This certificate is the property of

CUSTOMER: MBW Europe Ltd


DRAWING NO.	SERIAL NO.	DESCRIPTION	DELIVERY NOTE NO.	QTY	CUSTOMER ORDER NO.	INVOICE NO.	WORKS ORDER NO.
Assembly MK2 Sketch No 7 Iss D		Roller Striker Kit	60228033		11064AN	1103830/1103857	10454
Assembly MK2 Sketch No 7 Iss D		Roller Striker Kit	60228033		11064AN	1103830/1103857	10454
Assembly MK2 Sketch No 7 Iss D		Roller Striker Kit	60228033		11064AN	1103830/1103857	10454
Assembly MK2 Sketch No 7 Iss D		Roller Striker Kit	60228033		11064AN	1103830/1103857	10454
Assembly MK2 Sketch No 7 Iss D		Roller Striker Kit	60228033		11064AN	1103830/1103857	10454
Assembly MK2 Sketch No 7 Iss D		Roller Striker Kit	60228033		11064AN	1103830/1103857	10454
Assembly MK2 Sketch No 7 Iss D		Roller Striker Kit	60228033		11064AN	1103830/1103857	10454
Assembly MK2 Sketch No 7 Iss D		Roller Striker Kit	60228033		11064AN	1103830/1103857	10454
Assembly MK2 Sketch No 7 Iss D		Roller Striker Kit	60228033		11064AN	1103830/1103857	10454
Assembly MK2 Sketch No 7 Iss D		Roller Striker Kit	60228033		11064AN	1103830/1103857	10454
Assembly MK2 Sketch No 7 Iss D		Roller Striker Kit	60228033		11064AN	1103830/1103857	10454
Assembly MK2 Sketch No 7 Iss D		Roller Striker Kit	60228033		11064AN	1103830/1103857	10454

Certified that the whole of the supplied detailed herein have been inspected, tested and unless otherwise stated above that they conform in all respects to the specifications, drawings and contracts/order relative thereto.

SIGNED:  INSPECTOR'S SIGN: 
DATE: 28/2/2013

**THIS PAGE IS
INTENTIONALLY LEFT
BLANK**

PARTS

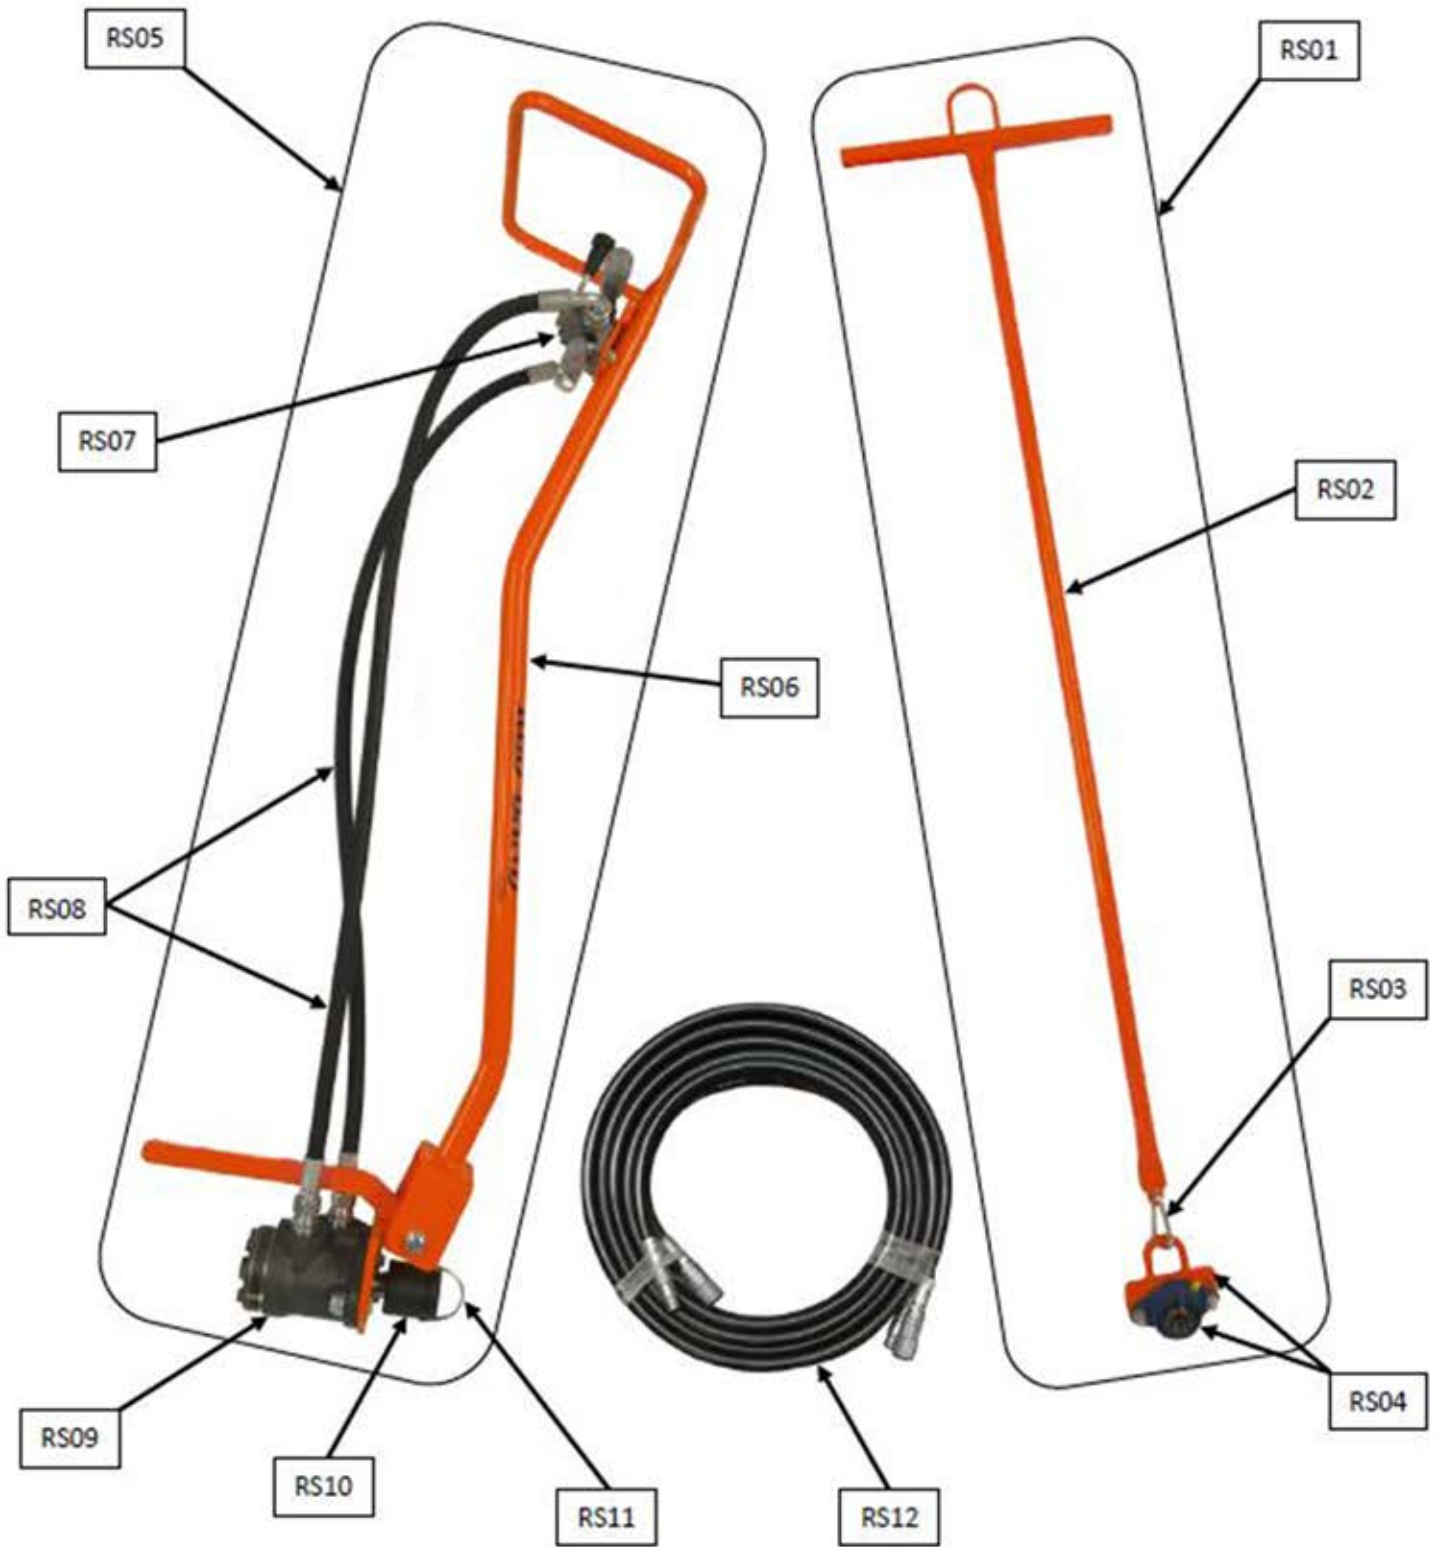

PARTS

PART NO	DESCRIPTION
RS01	Free Handle Assy
RS02	Free Handle Only
RS03	Spring Hook
RS04	Plate c/w Bearing
RS05	Drive Handle Assy
RS06	Drive Handle Only
RS07	Control Valve
RS08	Handle Hoses (Pair)
RS09	Drive Motor
RS10	Drive Coupling
RS11	C Clip
RS12	Hydraulic Hose Set (7m)

WARRANTY

WHAT DOES THIS WARRANTY COVER? MBW, Incorporated (MBW) warrants each New Machine against defects in material and workmanship for a period of twelve (12) months. "New Machine" means a machine shipped directly from MBW or authorized MBW dealer to the end user. This warranty commences on the first day the machine is sold, assigned to a rental fleet, or otherwise put to first use.

MBW warrants each Demonstration Machine against defects in material and workmanship for a period of six (6) months. "Demonstration Machine" means a machine used by MBW or its agents for promotional purposes. This warranty commences on the first day the machine is sold, assigned to a rental fleet, or otherwise put to first use.

This warranty covers the labor cost for replacement or repair of parts, components, or equipment on New Machines or Demonstration Machines, and MBW shall pay labor costs at MBW's prevailing rate to affect the warranted repair or replacement. MBW reserves the right to adjust labor claims on a claim-by-claim basis

This warranty covers the shipping cost of replacement parts, components, or equipment via common ground carriers from MBW to an authorized MBW dealer. Air freight is considered only in cases where ground transportation is not practical.

MAY THIS WARRANTY BE TRANSFERRED? This warranty is non-transferable and only applies to the original end user of a new machine or demonstration machine.

WHAT DOES THIS WARRANTY NOT COVER?

1. This warranty does not cover any Used Equipment. "Used Equipment" means any MBW machine or equipment that is not a New Machine or a Demonstration Machine. All Used Equipment is sold **AS IS/WHERE IS WITH ALL FAULTS**.

2. This warranty does not cover any New Machine, Demonstration Machine, or their equipment, parts, or components altered or modified in any way without MBW's prior written consent. This warranty does not cover the use of parts not specifically approved by MBW for use on MBW products. This warranty does not cover misuse, neglect, shipping damage, accidents, acts of God, the operation of any New Machine or Demonstration Machine in any way other than recommended by MBW in accordance with its specifications, or any other circumstances beyond MBW's control. This warranty does not cover any New Machine or Demonstration Machine repaired by anyone other than MBW factory branches or authorized MBW distributors.

3. This warranty does not cover, and MBW affirmatively disclaims, liability for any damage or injury resulting directly or indirectly from design, materials, or operation of a New Machine or Demonstration Machine or any other MBW product. MBW's liability with respect to any breach of warranty shall be limited to the provisions of this document and in no event shall exceed an amount equal to the purchase price of the New Machine or Demonstration Machine purchased from MBW.

4. This warranty does not cover engines, motors, and other assemblies or components produced by other manufacturers and used on a New Machine or Demonstration Machine, as said engines, motors, and other assemblies or components may have warranties provided by the manufacturer thereof. This warranty does not apply to consumable items, such as v-belts, filters, trowel and screed blades, seals, shock mounts,

batteries, and the like, all of which are sold AS IS/WHERE IS WITH ALL FAULTS.

5. This warranty does not cover the cost of transportation and other expenses which may be connected with warranty service but not specifically mentioned herein.

6. This warranty does not cover any updates to any New Machine, Demonstration Machine, or any other MBW product. MBW reserves the right to improve or make product changes without incurring any obligation to update, refit, or install the same on New Machines or Demonstration Machines previously sold.

WHAT MUST YOU DO TO OBTAIN WARRANTY COVERAGE?

Each New Machine or Demonstration Machine is accompanied by a Warranty Registration Card. You must sign, date, and return the Warranty Registration Card to the place of origin of the New Machine or Demonstration Machine, either to MBW, Inc. at P.O. Box 440, Slinger, Wisconsin 53086 or MBW Europe Ltd. at Units 2 & 3 Cochrane Street, Bolton BL3 6BN, United Kingdom, within ten days after purchase assignment to a rental fleet, or first use.

This signed warranty card is the buyer's affirmation that he has read, understood, and accepted the warranty at the time of purchase. Failure to return the warranty card as specified herein renders the warranty null and void. In order to receive warranty coverage consideration, warranty claims must be submitted within thirty (30) days after the New Machine or Demonstration Machine fails. Warranty claims must be submitted to MBW, Inc., MBW Europe LTD and written authorization for the return of merchandise or parts under the warranty must be obtained before shipment to MBW.

WHAT WILL MBW DO? MBW's obligation under this warranty is limited to the replacement or repair of parts for a New Machine or Demonstration Machine at MBW factory branches or at authorized MBW distributors, and such replacement or repair is the exclusive remedy provided hereunder. Labor must be performed at an authorized MBW distributor. MBW reserves the right to inspect and render a final decision on each warranty case, and MBW's repair or replacement is solely within the discretion of MBW.

IT IS EXPRESSLY AGREED THAT THIS SHALL BE THE SOLE AND EXCLUSIVE REMEDY UNDER THIS WARRANTY. UNDER NO CIRCUMSTANCES SHALL MBW BE LIABLE FOR ANY COSTS, LOSS, EXPENSE, DAMAGES, SPECIAL DAMAGES, INCIDENTAL DAMAGES, OR PUNITIVE DAMAGES ARISING DIRECTLY OR INDIRECTLY FROM THE USE OF THE NEW MACHINE OR DEMONSTRATION MACHINE WHETHER BASED UPON WARRANTY, CONTRACT, NEGLIGENCE, STRICT LIABILITY, OR ANY OTHER LEGAL THEORY.

THE FOREGOING WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR USE, AND FITNESS FOR A PARTICULAR PURPOSE, AND ALL OTHER OBLIGATIONS OR LIABILITY ON MBW'S PART. MBW NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME ON BEHALF OF MBW ANY OTHER LIABILITY OR WARRANTY IN CONNECTION WITH THE SALE OR SERVICE OF ANY NEW MACHINE, DEMONSTRATION MACHINE, OR ANY OTHER MBW PRODUCT.

MBW EUROPE



CONCRETE EQUIPMENT

QUALITY ENGINEERED. QUALITY BUILT. QUALITY SURVIVES.



SCREEDS



WALK-BEHIND
POWER TROWELS



CONCRETE
SPRAYERS



RIDE-ON
TROWELS



EDGING POWER TROWEL

+44 (0) 1204 387784



WWW.MBWEUROPE.COM